
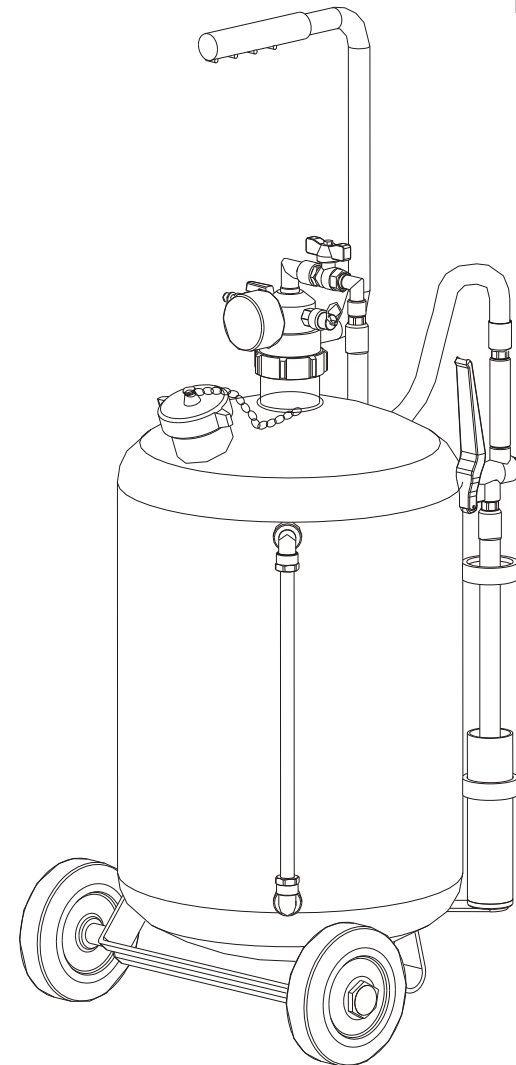


POD030

PNEUMATIC OIL DISPENSER MANUAL

■ POD030

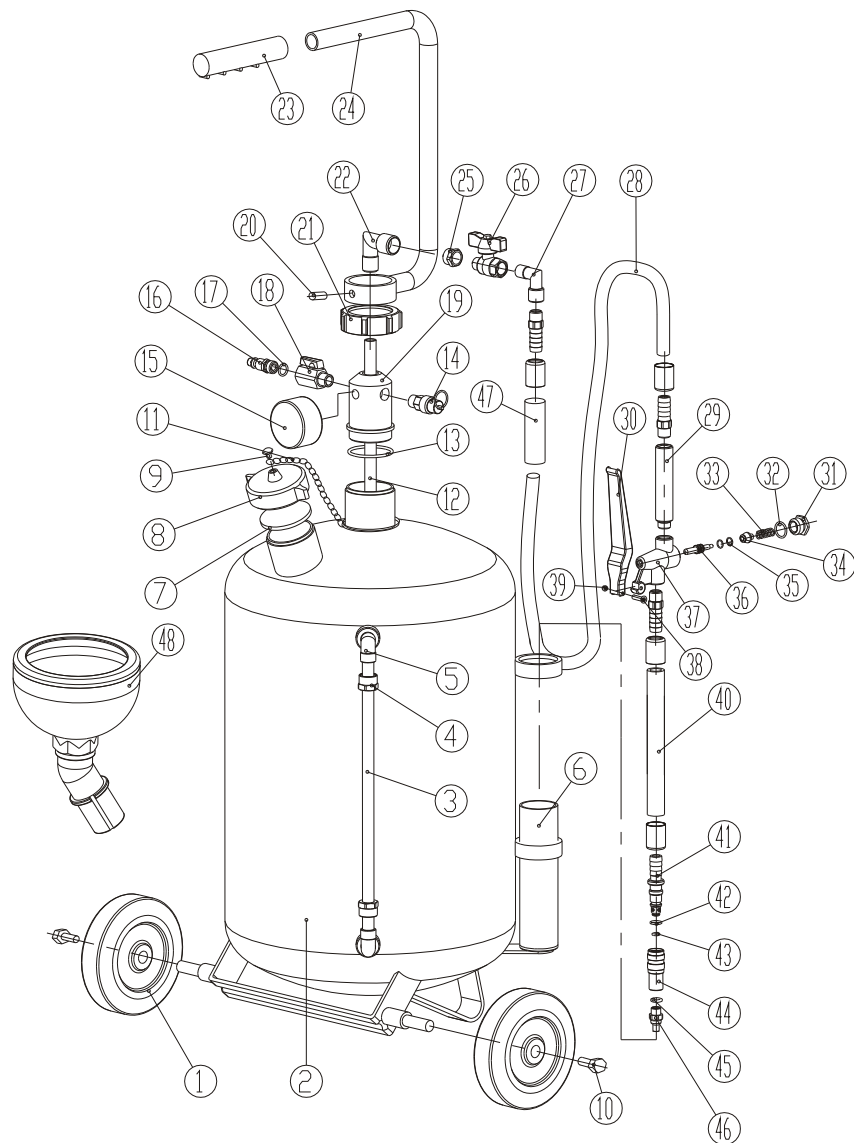


⚠ WARNING

- Do not deliver corrosive or flammable liquids.
- Do not expose the tank to heat sources.
- Do not do welding on the vessel only use the appliance for its intended purpose.

OPERATION

- Remove cap B and fill the reservoir (4/5 its capacity) with oil, using the funnel supplied.
- Secure cap B. Close ball valve A. Connect compressed air to quick couple D, open the ball valve E until manometer F gives a pressure of 3-8 bar.
- To deliver oil, open ball valve A. Open gun set G by it counter clockwise.

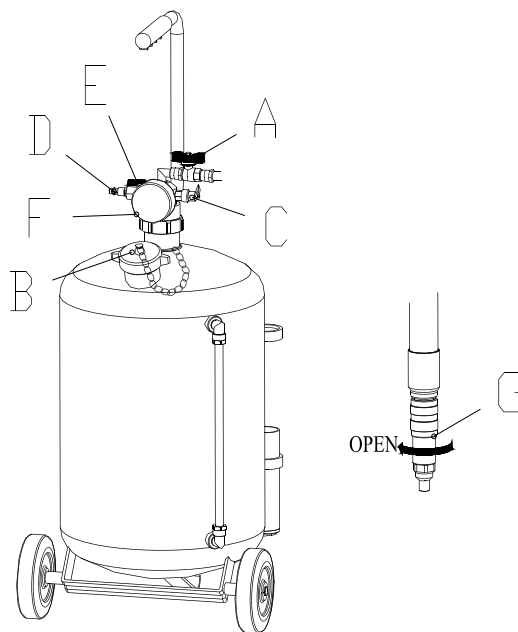

⚠ WARNING

Before opening the cap B always discharge the reservoir compressed air by opening ball valve E.

PART LIST

No.	Description	Quantity	No.	Description	Quantity
1	WHEELS	2	25	DOUBLE END ADAPTER	1
2	RESERVOIR 30L	2	26	BALL VALVE	1
3	TUBE WITH LABEL	1	27	ELBOW ADAPTER	2
4	RING	2	28	CONNECTING HOSE	1
5	ELBOW	2	29	GUN SPINDLE	1
6	CONTAINER	2	30	GUN HANDLE	1
7	GASKET	2	31	ROUND HEAD SCREWS PLUG	1
8	PRESSURE PLUG	2	32	O-RING 14X1.8	1
9	ROUND HEAD SCREWS	1	33	SPRING	2
10	BOLT	1	34	VALVE	1
11	CHAIN	1	35	O-RING 6X1.8	1
12	STEEL TUBE	12	36	HANDSPIKE	1
13	O-RING 42.5X2.65	1	37	GUN SEAT	1
14	SAFETY VALVE	1	38	SCREWS	1
15	GAUGE	1	39	HEXAGON NUT	1
16	PLUGS	1	40	CONNECTING HOSE	1
17	O-RING 10X1.8	1	41	DELIVERY GUN SPINDLE	1
18	BALL VALVE	1	42	O-RING 9X1.8	1
19	SEAT	1	43	O-RING 5X1.8	1
20	SCREWS	1	44	GUN SET	1
21	ROUND NUT WITH COLLAR	1	45	O-RING 8.5X1.8	1
22	ELBOW ADAPTER	1	46	GUN NIB	1
23	HANDLE	1	47	PROTECT SET	1
24	GRIPE	1	48	FUNNEL	1