

3275XP, 3275XF, 3275XM




DE (DEUTSCH)	
Gebrauchsanleitung	6
EN (ENGLISH)	
Instructions for Use	13
FR (FRANÇAIS)	
Mode d'emploi	20
NL (NEDERLANDS)	
Gebruiksaanwijzing	27
ES (ESPAÑOL)	
Instrucciones de uso	34
IT (ITALIANO)	
Istruzioni per l'uso	41
PT (PORTUGUÊS)	
Manual de instruções	48
FIN (SUOMI)	
Käyttöohje	55
S (SVENSKA)	
Brugsanvisning	62
N (NORSK)	
Bruksanvisning	69
DK (DANSK)	
Brugsanvisning	76
EST (EESTI)	
Kasutusjuhend	83
LT (LIETUVIŲ)	
Naudojimo instrukcija	90
LV (LATVIEŠU)	
Lietošanas instrukcija	97
GR (ΕΛΛΗΝΙΚΑ)	
Οδηγίες χρήσης	104




**MESTO Spritzenfabrik
Ernst Stockburger GmbH**
Ludwigsburger Straße 71
D-71691 Freiberg/Neckar
Tel.: +49 7141 272-0
Fax: +49 7141 272-100
info@mesto.de
www.mesto.de

Ersatzteile	Spare Parts	Pièces de Rechange
Reserve-onderdelen	Piezas de repuesto	Pezzi di ricambio
Peças sobressalentes	Varosad	Reservdelar
Reservdeler	Reservevedele	Varuosad
Atsarginės detalės	Rezerves daļas	Ανταλλακτικά


3275XP, 3275XF, 3275XM
5 I

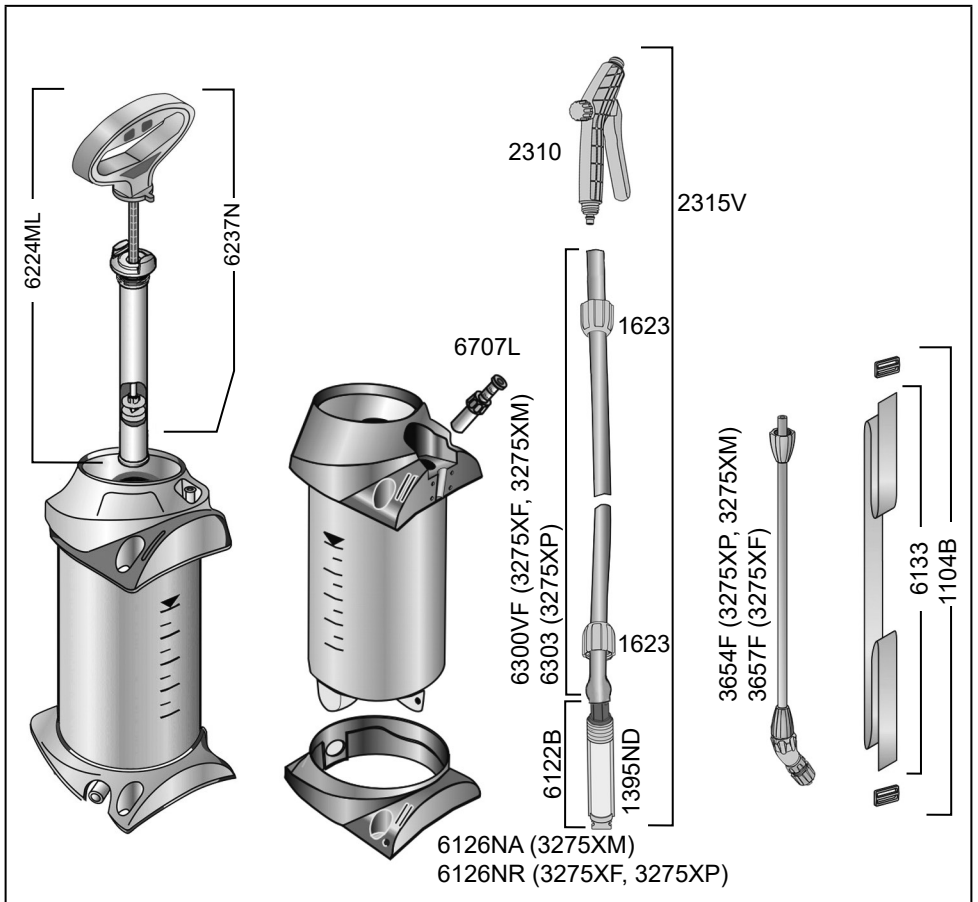


3275XP, 3275XF, 3275XM

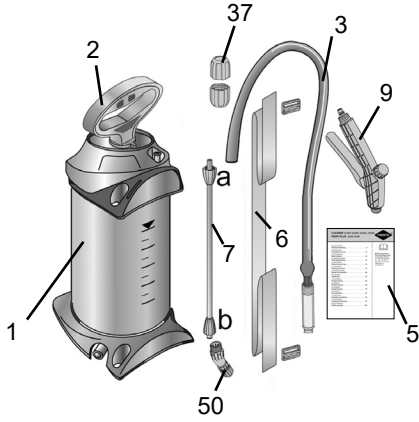


1a

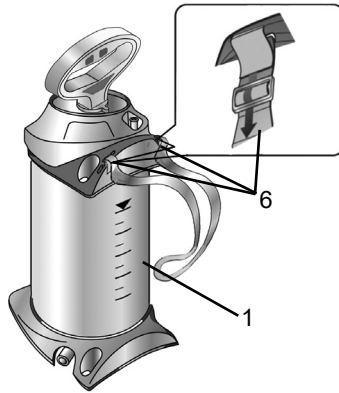

2a

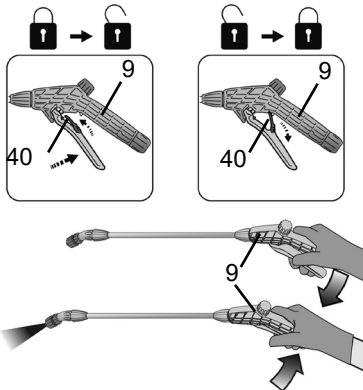

14

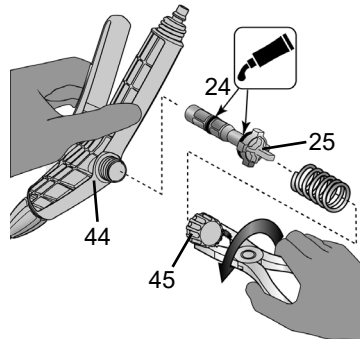

29

